

<i>Hazard Review</i>	
<ul style="list-style-type: none">• Crushing, pinching• Falling objects	
Prepared by:	Structural Maintenance SWP Working Group
Program Manager:	M. Avendaño, Asst. Superintendent, Structural Maintenance
Approved by:	J. Bramlett, EHS Program Manager E. Goldstein, General Manager
Issued:	5/18/01

BEFORE

1. Be familiar with and understand manufacturer's operating procedures.
2. Observe safety warnings and be aware of pinch points (these are the points in a machine where moving parts rotate either towards each other or toward a fixed component; should someone get caught in these points, it could create a serious injury).
3. Frequently check cables, chains, and other components for wear or damage, and repair as necessary.
4. Do not remove safety chain from platform if the chain is in tension. This safety chain should always be used when the unit is not in use.
5. Make sure that the area in which the platform will open and close is clear before opening and closing, and at all times during the operation.

DURING

1. Do not exceed rated capacity. This should be posted on the lift itself.
2. Place load in center of gate and onto gate as far as possible.
3. Secure the load as necessary to prevent movement.
4. Stand clear of all moving parts when opening, raising or lowering the platform. Do not stand right next to the lift while it is in operation.
5. Do not move the vehicle unless the lift gate is in latched position, with the safety chain hooked securely.
6. Do not leave the platform open, unlatched, or the cab safety switch "on" when the lift is not in use or unattended.
7. Never leave platform down to be used as a step.

AFTER

1. Return gate to storage position when task completed and secure in place.
2. Ensure that the lift is closed and locked.
3. Ensure that the cab safety switch is “off”.